

A DIVISION OF ROLLEASE ACMEDA

Quick Programming Guide





1.Pair shade to remote

Select channel on controller.



Hold **P1** button on motor head.







Release **P1** button on motor head.





Hold **STOP** on controller.

MOTOR RESPONSE





2.Change motor direction





To reverse shade direction, hold both UP and DOWN

until the motor responds.



MOTOR RESPONSE





3.Set top limit



CH

To save upper limit, hold both **UP** and **STOP**.





Set **lower limit**



To save lower limit, hold both **DOWN** and **STOP**.

MOTOR RESPONSE





4. Adjust lower limit



Move shade to desired



lowest position by pressing the **DOWN** arrow.



To save lower limit, hold both **DOWN** and **STOP**.



MOTOR RESPONSE





5.Adjust upper limit



Hold both **UP** and **STOP** on controller.











Move shade to desired upper position by pressing the **UP** arrow.





To save upper limit, hold both **UP** and **STOP**.



MOTOR RESPONSE







6.Set/Delete a Favorite Position

Press P2 on controller.















Press **STOP** on controller.



MOTOR RESPONSE





7.Create/Delete groups using P2

Press P2 on controller A.





Press P2 on controller A.





Press P2 on controller B.

MOTOR RESPONSE



8.Adjust Motor Speed



Press P2 on controller.









9.Lock Remote



To switch modes, hold right **LOCK** button for 5 seconds.



LCD displays "U"



For 1 CH

LED solid on when locked LED blinking when unlocked

v 2020.03 MK91-9999-SHCPOC

10.Hide Channels

Your multi channel remote can be configured to have anywhere between 1 or 15 visible channels. Inactive channels will not be visible when scrolling through the CH selection.





11.Setting Modes



The **P1 Button** is utilized to administer motor configurations as described below.

Hold **P1 button** on motor head

ACTIVE PAIRING MODE



SLEEP MODE



REVERSE DIRECTION



RESET TO FACTORY SETTINGS



12.Step Mode

Default motor mode is Roller after initial Limits have been set, use following steps to change to Step Mode.

Hold **UP & DOWN** on controller

Press **STOP** on controller



If motor is in Step Mode, use following steps to change to Roller Mode

Hold **UP & DOWN** on controller

Press **STOP** on controller



ROOMS

Group Automate shades by room and conveniently control them accordingly.



SCENES

Personalise shade control and organise how your shades operate by specific daily events.



TIMERS

Set and forget. Lower, raise and activate shade scenes automatically at the optimal time.



MULTIPLE SHADE TYPES

Awnings, Roller shades, External shades, Cellular ... Control every shade type from one screen.





Games Room 1 Device	Games Room 1 Device	$\left(+\right)$		
Home	Home	Favorites	Scenes	L Timers



Voice Control Home Automation Integration





Sunrise & Sunset Detection

Live Feedback

A DIVISION OF ROLLEASE ACMEDA

+1 203-590-5318

ustechsupport@rolleaseacmeda.com



automateshades.com

v 2020.03 MK91-9999-AUTPOC